 




## User Manual



# E75

### Quad-Core High Performance Flashlight

### FEATURES

- Utilizes 4 high-performance LEDs for an amazingly bright 4500 lumens
- Powered by a large-capacity rechargeable 21700 Li-ion battery, ensuring a max runtime of 26 days.
- Rechargeable via its USB Type-C port with the battery level indicator indicates the battery's power.
- Highly efficient constant current circuit provides stable output
- The single side switch controls six lighting modes including a strobe mode for emergencies.
- Durable tempered glass lens with AR film plating for scratch resistance, light transmittance reaches up to 99%
- Two-way body clip capability for varying conditions
- Magnetic tail hands-free fixation
- Premium type HA III hard-anodized anti-abrasive finish
- IP68 grade (2 meters submersible), Impact resistance 1.5 meters

### SPECIFICATIONS

Size: 129,3(Length) x 35 (Head Diameter) x 28mm (Tube Diameter)  
Weight: 145g(5.11oz.) w/o battery, 217g/7.85 oz w/ battery

### PACKAGE LIST

1x21700 battery; 1xUSB-C charging cable; 1xUSB port rubber cover;  
2xO-rings; 1xLanyard; 1xWarranty card; 1xUser manual

### TECHNICAL PARAMETER

FLY SCENE/ICONS	Turbo	High	Med2	Med1	Low	Moonlight	Strobe
	4500~1500 lumens	1500 lumens	600 lumens	200 lumens	50 lumens	1 lumen	3500~1500 lumens
	1min+ 1h 45min	1h 50min	4h 40min	16h	2days 12h	26days	15min 3h
	260m	148m	97m	64m	—	—	221m
	16900cd	5476cd	2352cd	1024cd	—	—	12210cd

Notice: The above-mentioned parameters (tested with IMR21700 battery) have been measured in accordance with the international flashlight testing standard ANSI/NEMA FL1, and are approximate and may vary from flashlights, batteries, and environments.

### OPERATIONS

**ON:** Single click

**OFF:** Single click under the light switched on

#### Output Selection:

With the light switched on, press and hold the switch to cycle through Low-Med1-Med2-High, loosen the switch at your selected mode, Next ON will memorize the last mode you selected.

**Turbo:** When the light is unlocked, Quick Double Click at any time;

Double Click again to switch between Turbo and the memorized mode.

**Strobe:** When the light is unlocked, Quick Triple Click at any time

**Moonlight:** Press and hold the switch for 0.5 seconds access to Moonlight.

 
The light memorizes the last selected brightness. When turned on again, the previously used brightness level will be recalled, (Moonlight, Strobe and Turbo mode will be not memorized)

#### Lock/Unlock

**Lock:** When the flashlight is OFF, press and hold the switch, the flashlight will be Locked after 3 seconds' Moonlight output, It is useless for switch operation.


**Unlock:** When the flashlight is Locked , press and hold the switch for 3 seconds, the flashlight will be Unlocked and light at Moonlight mode.

### INSULATING FILM

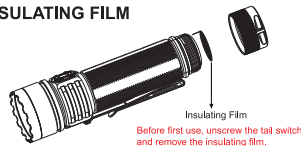


### BATTERY INSTALLATION

 1. Ensure battery is inserted with the positive (+) end pointing to the head of the flashlight (LED side).
2. It is normal for the flashlight not being able to reach 4500 lumens when the battery voltage is too low.

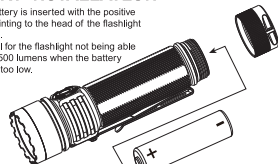

### USB-C CHARGING PORT

 

### LOW-VOLTAGE WARNING

Green light: >20%

Red light: among 20%~10%, low battery warning

Red flash light: < 10%

The light would be turned off when the voltage is below 2.7V

### WARNING

1. By using this device, you certify you have read the included User Manual and Warning Card and release the manufacturer and retailers from all liabilities.
2. Please use in accordance with applicable laws and regulations.
3. Keep out of reach of children.
4. DO NOT shine the light directly into human eyes. This may cause temporary blindness, or permanent damage to the eyes.
5. DO NOT cover the light head when the flashlight is on, or place the flashlight head on the ground. The radiation energy of the flashlight may cause damage to the flashlight itself, or even result in burning to other materials.
6. DO NOT modify/disassemble the light, otherwise the user will be in charge of the all responsibility, off the flashlight temporarily or turn it to low mode.
7. Please use turbo mode with caution, Turbo greatly reduces the runtime and leads to high temperature on the flashlight surface.

8. When the product is used in a low-temperature environment, please try and keep it warm. If the temperature is too cold, it may not reach the highest output.
9. If the product is left unused or carrier and transported, please lock the button to avoid accidentally activating the flashlight.
10. Please keep the front lens clean. Due to radiation energy, it may heat up foreign matter on the lens which can potentially cause damage.
11. The battery can only be stored inside the product and charged with the included standard charging cable.
12. Quality batteries with circuit protection will reduce the potential risk.
13. Store the battery with care, Please store the battery in a dedicated box after being taken out of the product if the battery needs to be changed.

### USAGE AND MAINTENANCE

1. Unauthorized disassembly may damage the light and void the warranty.
2. Lubricate the threads with professional grade lubricant regularly.
3. Please swap out the O-rings regularly to maintain the water resistance level.
4. Maintain and keep clean any contact surfaces of the flashlight with alcohol swab. This may prevent irregular flashes during use.

### PRODUCT WARRANTY

1. If the customer experiences any problems with an Acebeam product within 15 days of purchase, the dealer will replace that product.
2. If an Acebeam flashlight fails during normal use within a period of five years (60 months) of purchase, the dealer will repair or replace the flashlight with the same or similar model.
3. ACEBEAM Batteries, accessories and lanterns with built-in batteries are warranted for a period of one year (12 months) from date of purchase.
4. The warranty does not cover damage or failure caused by:
  - A. Rough usage or operation which does not comply with the user manual or product specifications.
  - B. Unauthorized disassembly, repair or modification. Defects or damaged caused by factors out of Acebeam's control.
  - C. Battery leakage damaged products.
5. If there are any questions about ACEBEAM products, please consider the warranty and contact ACEBEAM or your original Acebeam dealer for warranty return instructions.

Email: info@acebeam.com

### DISCLAIMER CLAUSE

Acebeam is not liable for damages or injuries sustained resulting from the usage of the product inconsistent with the warnings in the manual.



"Follow" us for more information about Acebeam.



SHENZHEN ZENBON TECHNOLOGY CO., LTD

+86-0755-23036551

www.acebeam.com

info@acebeam.com

1/F, No.1 Building, Yijiang Industrial Park, Dalang, Longhua,

Shenzhen 518100, Guangdong, China

Copyright © 2024 ACEBEAM. All rights reserved.  
Powered by Shenzhen Zenbon Technology Co., Ltd