



述之测量方法,使用1节3.6V 3500毫安时电池在实验室测 试所得。不同电池或使用环境可能对以上数据造成影响。 手电有温控程序,会自动调节电流,保护LED和电池。

# 使用说明 开机/关机状态 双击开关 关机前最后选择的档位 双击 微微亮 \_\_微亮 ↓低亮 进入爆闪前使用的照明档位

<sub>关机时</sub> 长按开关 → 高亮(暂时点亮,松手即灭)

开机时 长按开关0.5秒 关机

#### 锁定功能 🔒

关机时三击进入锁定状态,指示灯闪三次, 此时按键进入锁定状态。

#### 解锁功能 ■

锁定状态时三击解锁,指示灯闪一次, 此时恢复按键功能。

## 低电警示功能

如果在电量低于10%时继续使用手电,高亮、中亮和低亮 档位将逐步暂时性消失,只能选择微亮和微微亮档位。请 尽快给电池充电或者更换电池。

#### ⚠ 温馨提示

- 1、旋开尾部装入符合要求的电池,注意将电池正极朝向手电头部
- 2、若电筒长时间未使用,请将电池取出,防止漏液
- 3、不能将光线直射眼睛,避免对眼睛照成伤害

# 保修服务

15天包换: 自售出之日起15天内, 在正常使用情况下, 若出现产品质 量问题,客户可选择更换新品或修理服务。

1年免费保修: 自售出之日起1年内,用户在正常使用情况下,产品若 出现质量问题,则享受免费维修服务。

终身有限保修: 超过1年免费保修期后, 我们将提供有偿保修, 费用以 实际更换材料费用为准,不另收取人工费用。


保修凭证: 消费者需要售后服务时, 可凭购物发票或收据与经销商联 系,由经销商对消费者提供服务,我公司将对经销商提供服务支持。 免费保修不包括由以下行为造成的损坏和故障

- 1. 正常使用造成的磨损
- 2. 粗暴操作或者违反本手册内容的不正确操作
- 3. 电池漏液或者不正确使用电池
- 想了解更多产品信息或者动态,请访问我司官方网站 www.folomov.com

# 留名实业有限公司

联系电话: 86-(0)755 2376 9382 广东省深圳市龙华区大浪街道华繁路289号裕健丰科技园B栋403

RŏHS 🦃 🗏 (E

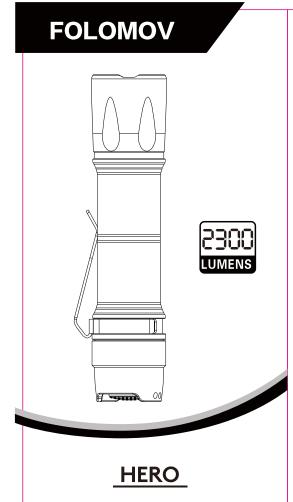

# **Product features**

1. 107mm length and 55g weight only. Compact and

2. Can multi-task as a tactical light, EDC light, or outdoors

3. Adopt CREE XHP50.2 LED with a span life of 50000 hours. Max output up to 2300 lumens.

4. The included 3500mAh Li-ion battery has a built-in USB Type-C port for 1.5A fast charging.

5. Multi-function tactical tail switch features both temporary

Turbo and constant brightness levels

6. Five brightness levels for option. Meet different lighting demand in various occasions.

7. With strobe, SOS and beacon modes. Helpful in emergent

8. With reverse polarity protection.

9. With overheating protection. Protect internal circuit and expand the span life of electronic components.

10. IPX8 waterproof rating

#### TURBO HIGH MEDIUM LOW ULTRA-LOW **11**H **27**H 150H 5 H

Strobe SOS Mr N 2300 2300 THROW CANDELA RATING IMPACT LUMENS LUMENS 200 M 10000cd IPX8 2M

WEIGHT: 55g(without battery)

DIMENSION: 107 X 24.5 mm

Note: Above parameters are result of testing the HERO flashlight in the lab with 1pc 3.6V 3500mAh Li-ion battery according to ANSI/NEMA FL1 standard. The result may vary when using different batteries and testing in different environment.

## Operation:

Option 1: Press and hold the tail switch to access to turbo mode. The light will be off when you release your finger. Option 2: Quickly press the tail switch once to access to the last mode you choose before turning off the light. When in this mode, quickly press the tail switch to cycle through

 $ultra-low {\rightarrow} low {\rightarrow} med {\rightarrow} high {\rightarrow} turbo {\rightarrow} ultra-low \ and \ choose \ the$ one your need.

## Strobe, SOS and Beacon

1. Activation: Press tail switch twice to access to strobe no matter the light is on or off. 2. When in strobe mode, press tail switch twice to cycle

 $through \ Strobe {\longrightarrow} SOS {\longrightarrow} Beacon {\longrightarrow} Strobe.$ 

Press and hold the tail switch for 0.5s.

#### Lockout function: Lock the tail switch to avoid accidental activation

When the light is off, quickly press tail switch for 3 times to lock it. The LED will flash for 3 times and it will not be able to

While tail switch is locked, quickly press it for 3 times. The LED will flash once, then can be turned on as normal.

# Low voltage warning

Remaining capacity is always detected when the flashlight is on. When remaining capacity is less than 10%, only low and ultra-low levels are optional. It reminds you of replacing or charging the battery soon.

## ⚠ CAUTION

. Insert the battery with the anode  $\mathsf{side}(\mathsf{+})$  towards flashlight head. 2. Pls remove the battery if this flashlight has not been used for

3. Do not shine the light to eyes.

Users can contact distributors/dealers from whom they buy Folomov products for warrant support with related trade invoice or recipt.

#### Warranty Details

1. 15 days free replacement: distributors/dealers will replace users a new flashlight within 15 days of purchase for any manufacturing defects if the problem develops in normal use.

- 2. 1 year free repair: we will offer free repair within 1 year from the date of purchase if the problem develops in normal use.
- 3. Limited lifetime warranty: For flashlight beyond the free repair warranty period, we provide lifetime repair but will charge for replace parts. Distributors/dealers will notify users the cost of
- 4. Free warranty does not cover any damage or failure caused
- a. Normal wear
- b. Rough operation
- c. Battery leakage

For more info., please visit www.folomov.com. Welcome to follow @folomovbrand on Facebook.

# LUMIN INDUSTRIAL LIMITED www.folomov.com

Room 403, Bld. B, Yujianfeng Industrial Park, No. 289 Huafan Road, Longhua, Shenzhen, 518100 China

Tel: 86-(0)755 2376 9382 RŏHS 🦃 🗏 CE