



Thank you for purchasing this Olight Product. Please read this manual carefully before use and keep it for future reference!

IN THE BOX

PRODUCT OVERVIEW

Specifications

Mode	High	Low
White Light Mode	3000 lumens	230 lumens
Yellow Light Mode	2500 lumens	200 lumens

REMOTO CONTROL

- Single press to turn the light on or increase the brightness by one level (10 levels available). Long press for 0.5 seconds to access the brightest setting directly.
- Single press to turn the light off or decrease the brightness by one level (10 levels available). Long press for 0.5 seconds to turn it off directly.

REMOTO CONTROL PAIRING

After turning off the light, please complete the following steps within 10 seconds:

- Turn the light on and hold for 3 seconds.
- Press and hold the right rotary knob clockwise for 4 positions, then clockwise once again for 4 positions.
- Turn the light off for 10 seconds.

RECHARGE

Use a 30W or higher USB power source for the fastest charging possible. When charging with a USB power source that is less than 30W, charging times will be extended.

HOW TO RECHARGE

Press charge the product before first use. Connect one end of the provided USB-C cable to an external USB-C power source (power adapter not included), on the silicone dust plug that shields the USB-C charging port, and then insert the other end of the cable into the USB-C charging port.

BATTERY LEVEL INDICATOR

REPLACE REMOTE CONTROLLER BATTERY

Use a CR2032 coin cell battery. Remove the old battery and insert the new one with the positive (+) and negative (-) terminals facing the correct directions.

INSTALLATION

NOTES:

- Devices operating at 400-470MHz microwave signal such as walkie-talkies may interfere with remote control.
- The remote control only supports one-to-one control. One-to-many control may cause it to work improperly.
- After being turned off for 48 hours, the product will enter sleep mode, which will cause the remote control to stop working. You can turn the product back on again with the power rotary knob.
- You can control the product with the remote controller and rotary knob simultaneously.
- If the remote control fails due to misoperation, please pair again following the operating instructions.

DANGER

- DO NOT shine the light directly into human eyes. This may cause temporary blindness or permanent damage to the eyes.
- DO NOT over the product when it is on. The heat build up may cause close objects to burn or even result in unexpected fires.
- The product gets hot, please DO NOT place it in a backpack, fabric bag, or flammable plastic container.

CONTENT

(EN) English	01
(CN) 简体中文	01
(FI) Finnish	02
(SV) Swedish	04
(NL) Nederlands	04
(PL) Polska	05
(DE) Deutsch	06
(HU) Magyarorszag	07
(RU) Русский	08
(ES) Español	09
(RO) Romanes	10
(UA) Ukrainian	11
(JP) 日本語	13
(KR) 한국어	13
(TH) ไทย	14
(FR) Français	15
(IT) Italia	16
(SK) Slovenský jazyk	16
(PT) Português	17

RECHARGE

BATTERY LEVEL INDICATOR

When the product is turned on or being discharged, the battery-ink indicator displays the remaining battery level.

REPLACE REMOTE CONTROLLER BATTERY

Open the battery cover and replace the CR2032 battery. The battery cover has a small notch to allow for easy removal.

INSTALLATION

NOTES:

- Devices operating at 400-470MHz microwave signal such as walkie-talkies may interfere with remote control.
- The remote control only supports one-to-one control. One-to-many control may cause it to work improperly.
- After being turned off for 48 hours, the product will enter sleep mode, which will cause the remote control to stop working. You can turn the product back on again with the power rotary knob.
- You can control the product with the remote controller and rotary knob simultaneously.
- If the remote control fails due to misoperation, please pair again following the operating instructions.

DANGER

- DO NOT shine the light directly into human eyes. This may cause temporary blindness or permanent damage to the eyes.
- DO NOT over the product when it is on. The heat build up may cause close objects to burn or even result in unexpected fires.
- The product gets hot, please DO NOT place it in a backpack, fabric bag, or flammable plastic container.

CONTENT

(SV) Swedish	01
(NL) Nederlands	04
(PL) Polska	05
(DE) Deutsch	06
(HU) Magyarorszag	07
(RU) Русский	08
(ES) Español	09
(RO) Romanes	10
(UA) Ukrainian	11
(JP) 日本語	13
(KR) 한국어	13
(TH) ไทย	14
(FR) Français	15
(IT) Italia	16
(SK) Slovenský jazyk	16
(PT) Português	17

RECHARGE

BATTERY LEVEL INDICATOR

When the product is turned on or being discharged, the battery-ink indicator displays the remaining battery level.

REPLACE REMOTE CONTROLLER BATTERY

Open the battery cover and replace the CR2032 battery. The battery cover has a small notch to allow for easy removal.

INSTALLATION

NOTES:

- Devices operating at 400-470MHz microwave signal such as walkie-talkies may interfere with remote control.
- The remote control only supports one-to-one control. One-to-many control may cause it to work improperly.
- After being turned off for 48 hours, the product will enter sleep mode, which will cause the remote control to stop working. You can turn the product back on again with the power rotary knob.
- You can control the product with the remote controller and rotary knob simultaneously.
- If the remote control fails due to misoperation, please pair again following the operating instructions.

DANGER

- DO NOT shine the light directly into human eyes. This may cause temporary blindness or permanent damage to the eyes.
- DO NOT over the product when it is on. The heat build up may cause close objects to burn or even result in unexpected fires.
- The product gets hot, please DO NOT place it in a backpack, fabric bag, or flammable plastic container.

CONTENT

(NL) Nederlands	04
(PL) Polska	05
(DE) Deutsch	06
(HU) Magyarorszag	07
(RU) Русский	08
(ES) Español	09
(RO) Romanes	10
(UA) Ukrainian	11
(JP) 日本語	13
(KR) 한국어	13
(TH) ไทย	14
(FR) Français	15
(IT) Italia	16
(SK) Slovenský jazyk	16
(PT) Português	17

RECHARGE

BATTERY LEVEL INDICATOR

When the product is turned on or being discharged, the battery-ink indicator displays the remaining battery level.

REPLACE REMOTE CONTROLLER BATTERY

Open the battery cover and replace the CR2032 battery. The battery cover has a small notch to allow for easy removal.

INSTALLATION

NOTES:

- Devices operating at 400-470MHz microwave signal such as walkie-talkies may interfere with remote control.
- The remote control only supports one-to-one control. One-to-many control may cause it to work improperly.
- After being turned off for 48 hours, the product will enter sleep mode, which will cause the remote control to stop working. You can turn the product back on again with the power rotary knob.
- You can control the product with the remote controller and rotary knob simultaneously.
- If the remote control fails due to misoperation, please pair again following the operating instructions.

DANGER

- DO NOT shine the light directly into human eyes. This may cause temporary blindness or permanent damage to the eyes.
- DO NOT over the product when it is on. The heat build up may cause close objects to burn or even result in unexpected fires.
- The product gets hot, please DO NOT place it in a backpack, fabric bag, or flammable plastic container.

CONTENT

(FR) Français	15
(IT) Italia	16
(SK) Slovenský jazyk	16
(PT) Português	17

CONTENTS

(EN) English	01
(CN) 简体中文	01
(FI) Finnish	02
(SV) Swedish	04
(NL) Nederlands	04
(PL) Polska	05
(DE) Deutsch	06
(HU) Magyarorszag	07
(RU) Русский	08
(ES) Español	09
(RO) Romanes	10
(UA) Ukrainian	11
(JP) 日本語	13
(KR) 한국어	13
(TH) ไทย	14
(FR) Français	15
(IT) Italia	16
(SK) Slovenský jazyk	16
(PT) Português	17

(EN) English

HOW TO OPERATE

LEFT ROTARY KNOB (POWER)

ON/OFF: Rotate the knob clockwise to turn on or counterclockwise to turn off.

Stepless Adjustment of Brightness: While the light is on, rotate the knob clockwise to increase brightness or counterclockwise to decrease brightness.

RIGHT ROTARY KNOB (COLOR TEMP)

Change Color Temperature: While the light is on, rotate the knob clockwise to change color temperature or counterclockwise to increase color temperature.

REMOTE CONTROL

- Single press to turn the light on or increase the brightness by one level (10 levels available).
- Long press for 0.5 seconds to access the brightest setting directly.
- Single press to turn the light off or decrease the brightness by one level (10 levels available).
- Long press for 0.5 seconds to turn it off directly.

REMOTE CONTROL PAIRING

After turning off the light, please complete the following steps within 10 seconds:

- Turn the light on and hold for 3 seconds.
- Press and hold the right rotary knob clockwise for 4 positions, then clockwise once again for 4 positions.
- Turn the light off for 10 seconds.

RECHARGE

Use a 30W or higher USB power source for the fastest charging possible. When charging with a USB power source that is less than 30W, charging times will be extended.

(EN) English

HOW TO OPERATE

LEFT ROTARY KNOB (POWER)

ON/OFF: Rotate the knob clockwise to turn on or counterclockwise to turn off.

Stepless Adjustment of Brightness: While the light is on, rotate the knob clockwise to increase brightness or counterclockwise to decrease brightness.

RIGHT ROTARY KNOB (COLOR TEMP)

Change Color Temperature: While the light is on, rotate the knob clockwise to change color temperature or counterclockwise to increase color temperature.

REMOTE CONTROL

- Single press to turn the light on or increase the brightness by one level (10 levels available).
- Long press for 0.5 seconds to access the brightest setting directly.
- Single press to turn the light off or decrease the brightness by one level (10 levels available).
- Long press for 0.5 seconds to turn it off directly.

REMOTE CONTROL PAIRING

After turning off the light, please complete the following steps within 10 seconds:

- Turn the light on and hold for 3 seconds.
- Press and hold the right rotary knob clockwise for 4 positions, then clockwise once again for 4 positions.
- Turn the light off for 10 seconds.

RECHARGE

Use a 30W or higher USB power source for the fastest charging possible. When charging with a USB power source that is less than 30W, charging times will be extended.

(NO) Norwegian

HOW TO OPERATE

LEFT ROTARY KNOB (POWER)

ON/OFF: Rotate the knob clockwise to turn on or counterclockwise to turn off.

Stepless Adjustment of Brightness: While the light is on, rotate the knob clockwise to increase brightness or counterclockwise to decrease brightness.

RIGHT ROTARY KNOB (COLOR TEMP)

Change Color Temperature: While the light is on, rotate the knob clockwise to change color temperature or counterclockwise to increase color temperature.

REMOTE CONTROL

- Single press to turn the light on or increase the brightness by one level (10 levels available).
- Long press for 0.5 seconds to access the brightest setting directly.
- Single press to turn the light off or decrease the brightness by one level (10 levels available).
- Long press for 0.5 seconds to turn it off directly.

REMOTE CONTROL PAIRING

After turning off the light, please complete the following steps within 10 seconds:

- Turn the light on and hold for 3 seconds.
- Press and hold the right rotary knob clockwise for 4 positions, then clockwise once again for 4 positions.
- Turn the light off for 10 seconds.

RECHARGE

Use a 30W or higher USB power source for the fastest charging possible. When charging with a USB power source that is less than 30W, charging times will be extended.

(SV) Swedish

HOW TO OPERATE

LEFT ROTARY KNOB (POWER)

ON/OFF: Rotate the knob clockwise to turn on or counterclockwise to turn off.

Stepless Adjustment of Brightness: While the light is on, rotate the knob clockwise to increase brightness or counterclockwise to decrease brightness.

RIGHT ROTARY KNOB (COLOR TEMP)

Change Color Temperature: While the light is on, rotate the knob clockwise to change color temperature or counterclockwise to increase color temperature.

REMOTE CONTROL

- Single press to turn the light on or increase the brightness by one level (10 levels available).
- Long press for 0.5 seconds to access the brightest setting directly.
- Single press to turn the light off or decrease the brightness by one level (10 levels available).
- Long press for 0.5 seconds to turn it off directly.

REMOTE CONTROL PAIRING

After turning off the light, please complete the following steps within 10 seconds:

- Turn the light on and hold for 3 seconds.
- Press and hold the right rotary knob clockwise for 4 positions, then clockwise once again for 4 positions.
- Turn the light off for 10 seconds.

RECHARGE

Use a 30W or higher USB power source for the fastest charging possible. When charging with a USB power source that is less than 30W, charging times will be extended.

(NL) Nederlands

HOW TO OPERATE

LEFT ROTARY KNOB (POWER)

ON/OFF: Rotate the knob clockwise to turn on or counterclockwise to turn off.

Stepless Adjustment of Brightness: While the light is on, rotate the knob clockwise to increase brightness or counterclockwise to decrease brightness.

RIGHT ROTARY KNOB (COLOR TEMP)

Change Color Temperature: While the light is on, rotate the knob clockwise to change color temperature or counterclockwise to increase color temperature.

REMOTE CONTROL

- Single press to turn the light on or increase the brightness by one level (10 levels available).
- Long press for 0.5 seconds to access the brightest setting directly.
- Single press to turn the light off or decrease the brightness by one level (10 levels available).
- Long press for 0.5 seconds to turn it off directly.

REMOTE CONTROL PAIRING

After turning off the light, please complete the following steps within 10 seconds:

- Turn the light on and hold for 3 seconds.
- Press and hold the right rotary knob clockwise for 4 positions, then clockwise once again for 4 positions.
- Turn the light off for 10 seconds.

RECHARGE

Use a 30W or higher USB power source for the fastest charging possible. When charging with a USB power source that is less than 30W, charging times will be extended.

(DE) Deutsch

HOW TO OPERATE

LEFT ROTARY KNOB (POWER)

ON/OFF: Rotate the knob clockwise to turn on or counterclockwise to turn off.

Stepless Adjustment of Brightness: While the light is on, rotate the knob clockwise to increase brightness or counterclockwise to decrease brightness.

RIGHT ROTARY KNOB (COLOR TEMP)

Change Color Temperature: While the light is on, rotate the knob clockwise to change color temperature or counterclockwise to increase color temperature.

REMOTE CONTROL

- Single press to turn the light on or increase the brightness by one level (10 levels available).
- Long press for 0.5 seconds to access the brightest setting directly.
- Single press to turn the light off or decrease the brightness by one level (10 levels available).
- Long press for 0.5 seconds to turn it off directly.

REMOTE CONTROL PAIRING

After turning off the light, please complete the following steps within 10 seconds:

- Turn the light on and hold for 3 seconds.
- Press and hold the right rotary knob clockwise for 4 positions, then clockwise once again for 4 positions.
- Turn the light off for 10 seconds.

RECHARGE

Use a 30W or higher USB power source for the fastest charging possible. When charging with a USB power source that is less than 30W, charging times will be extended.

(HU) Magyarorszag

HOW TO OPERATE

LEFT ROTARY KNOB (POWER)

ON/OFF: Rotate the knob clockwise to turn on or counterclockwise to turn off.

Stepless Adjustment of Brightness: While the light is on, rotate the knob clockwise to increase brightness or counterclockwise to decrease brightness.

RIGHT ROTARY KNOB (COLOR TEMP)

Change Color Temperature: While the light is on, rotate the knob clockwise to change color temperature or counterclockwise to increase color temperature.

REMOTE CONTROL

- Single press to turn the light on or increase the brightness by one level (10 levels available).
- Long press for 0.5 seconds to access the brightest setting directly.
- Single press to turn the light off or decrease the brightness by one level (10 levels available).
- Long press for 0.5 seconds to turn it off directly.

REMOTE CONTROL PAIRING

After turning off the light, please complete the following steps within 10 seconds:

- Turn the light on and hold for 3 seconds.
- Press and hold the right rotary knob clockwise for 4 positions, then clockwise once again for 4 positions.
- Turn the light off for 10 seconds.

RECHARGE

Use a 30W or higher USB power source for the fastest charging possible. When charging with a USB power source that is less than 30W, charging times will be extended.

(RU) Русский

HOW TO OPERATE

LEFT ROTARY KNOB (POWER)

ON/OFF: Rotate the knob clockwise to turn on or counterclockwise to turn off.

Stepless Adjustment of Brightness: While the light is on, rotate the knob clockwise to increase brightness or counterclockwise to decrease brightness.

RIGHT ROTARY KNOB (COLOR TEMP)

Change Color Temperature: While the light is on, rotate the knob clockwise to change color temperature or counterclockwise to increase color temperature.

REMOTE CONTROL

- Single press to turn the light on or increase the brightness by one level (10 levels available).
- Long press for 0.5 seconds to access the brightest setting directly.
- Single press to turn the light off or decrease the brightness by one level (10 levels available).
- Long press for 0.5 seconds to turn it off directly.

REMOTE CONTROL PAIRING

After turning off the light, please complete the following steps within 10 seconds:

- Turn the light on and hold for 3 seconds.
- Press and hold the right rotary knob clockwise for 4 positions, then clockwise once again for 4 positions.
- Turn the light off for 10 seconds.

RECHARGE

Use a 30W or higher USB power source for the fastest charging possible. When charging with a USB power source that is less than 30W, charging times will be extended.

(ES) Español

HOW TO OPERATE

LEFT ROTARY KNOB (POWER)

ON/OFF: Rotate the knob clockwise to turn on or counterclockwise to turn off.

Stepless Adjustment of Brightness: While the light is on, rotate the knob clockwise to increase brightness or counterclockwise to decrease brightness.

RIGHT ROTARY KNOB (COLOR TEMP)

Change Color Temperature: While the light is on, rotate the knob clockwise to change color temperature or counterclockwise to increase color temperature.

REMOTE CONTROL

- Single press to turn the light on or increase the brightness by one level (10 levels available).
- Long press for 0.5 seconds to access the brightest setting directly.
- Single press to turn the light off or decrease the brightness by one level (10 levels available).
- Long press for 0.5 seconds to turn it off directly.

REMOTE CONTROL PAIRING

After turning off the light, please complete the following steps within 10 seconds:

- Turn the light on and hold for 3 seconds.
- Press and hold the right rotary knob clockwise for 4 positions, then clockwise once again for 4 positions.
- Turn the light off for 10 seconds.

RECHARGE

Use a 30W or higher USB power source for the fastest charging possible. When charging with a USB power source that is less than 30W, charging times will be extended.

(RO) Romanes

HOW TO OPERATE

LEFT ROTARY KNOB (POWER)

ON/OFF: Rotate the knob clockwise to turn on or counterclockwise to turn off.

Stepless Adjustment of Brightness: While the light is on, rotate the knob clockwise to increase brightness or counterclockwise to decrease brightness.

RIGHT ROTARY KNOB (COLOR TEMP)

Change Color Temperature: While the light is on, rotate the knob clockwise to change color temperature or counterclockwise to increase color temperature.

REMOTE CONTROL

- Single press to turn the light on or increase the brightness by one level (10 levels available).
- Long press for 0.5 seconds to access the brightest setting directly.
- Single press to turn the light off or decrease the brightness by one level (10 levels available).
- Long press for 0.5 seconds to turn it off directly.

REMOTE CONTROL PAIRING

After turning off the light, please complete the following steps within 10 seconds:

- Turn the light on and hold for 3 seconds.
- Press and hold the right rotary knob clockwise for 4 positions, then clockwise once again for 4 positions.
- Turn the light off for 10 seconds.

RECHARGE

Use a 30W or higher USB power source for the fastest charging possible. When charging with a USB power source that is less than 30W, charging times will be extended.

(UA) Ukrainian

HOW TO OPERATE

LEFT ROTARY KNOB (POWER)

ON/OFF: Rotate the knob clockwise to turn on or counterclockwise to turn off.

Stepless Adjustment of Brightness: While the light is on, rotate the knob clockwise to increase brightness or counterclockwise to decrease brightness.

RIGHT ROTARY KNOB (COLOR TEMP)

Change Color Temperature: While the light is on, rotate the knob clockwise to change color temperature or counterclockwise to increase color temperature.

REMOTE CONTROL

- Single press to turn the light on or increase the brightness by one level (10 levels available).
- Long press for 0.5 seconds to access the brightest setting directly.
- Single press to turn the light off or decrease the brightness by one level (10 levels available).
- Long press for 0.5 seconds to turn it off directly.

REMOTE CONTROL PAIRING

After turning off the light, please complete the following steps within 10 seconds:

- Turn the light on and hold for 3 seconds.
- Press and hold the right rotary knob clockwise for 4 positions, then clockwise once again for 4 positions.
- Turn the light off for 10 seconds.

RECHARGE

Use a 30W or higher USB power source for the fastest charging possible. When charging with a USB power source that is less than 30W, charging times will be extended.

(JP) 日本語

HOW TO OPERATE

LEFT ROTARY KNOB (POWER)

ON/OFF: Rotate the knob clockwise to turn on or counterclockwise to turn off.

Stepless Adjustment of Brightness: While the light is on, rotate the knob clockwise to increase brightness or counterclockwise to decrease brightness.

RIGHT ROTARY KNOB (COLOR TEMP)

Change Color Temperature: While the light is on, rotate the knob clockwise to change color temperature or counterclockwise to increase color temperature.

REMOTE CONTROL

- Single press to turn the light on or increase the brightness by one level (10 levels available).
- Long press for 0.5 seconds to access the brightest setting directly.
- Single press to turn the light off or decrease the brightness by one level (10 levels available).
- Long press for 0.5 seconds to turn it off directly.

REMOTE CONTROL PAIRING

After turning off the light, please complete the following steps within 10 seconds:

- Turn the light on and hold for 3 seconds.
- Press and hold the right rotary knob clockwise for 4 positions, then clockwise once again for 4 positions.
- Turn the light off for 10 seconds.

RECHARGE

Use a 30W or higher USB power source for the fastest charging possible. When charging with a USB power source that is less than 30W, charging times will be extended.

(KR) 한국어

HOW TO OPERATE

LEFT ROTARY KNOB (POWER)

ON/OFF: Rotate the knob clockwise to turn on or counterclockwise to turn off.

Stepless Adjustment of Brightness: While the light is on, rotate the knob clockwise to increase brightness or counterclockwise to decrease brightness.

RIGHT ROTARY KNOB (COLOR TEMP)

Change Color Temperature: While the light is on, rotate the knob clockwise to change color temperature or counterclockwise to increase color temperature.

REMOTE CONTROL

- Single press to turn the light on or increase the brightness by one level (10 levels available).
- Long press for 0.5 seconds to access the brightest setting directly.
- Single press to turn the light off or decrease the brightness by one level (10 levels available).
- Long press for 0.5 seconds to turn it off directly.

REMOTE CONTROL PAIRING

After turning off the light, please complete the following steps within 10 seconds:

- Turn the light on and hold for 3 seconds.
- Press and hold the right rotary knob clockwise for 4 positions, then clockwise once again for 4 positions.
- Turn the light off for 10 seconds.

RECHARGE

Use a 30W or higher USB power source for the fastest charging possible. When charging with a USB power source that is less than 30W, charging times will be extended.

(TH) ไทย

HOW TO OPERATE

LEFT ROTARY KNOB (POWER)

ON/OFF: Rotate the knob clockwise to turn on or counterclockwise to turn off.

Stepless Adjustment of Brightness: While the light is on, rotate the knob clockwise to increase brightness or counterclockwise to decrease brightness.

RIGHT ROTARY KNOB (COLOR TEMP)

Change Color Temperature: While the light is on, rotate the knob clockwise to change color temperature or counterclockwise to increase color temperature.

REMOTE CONTROL

- Single press to turn the light on or increase the brightness by one level (10 levels available).
- Long press for 0.5 seconds to access the brightest setting directly.
- Single press to turn the light off or decrease the brightness by one level (10 levels available).
- Long press for 0.5 seconds to turn it off directly.

REMOTE CONTROL PAIRING

After turning off the light, please complete the following steps within 10 seconds:

- Turn the light on and hold for 3 seconds.
- Press and hold the right rotary knob clockwise for 4 positions, then clockwise once again for 4 positions.
- Turn the light off for 10 seconds.

RECHARGE

Use a 30W or higher USB power source for the fastest charging possible. When charging with a USB power source that is less than 30W, charging times will be extended.

(FR) Français

UTILISATION

INTER interrupteur ROTATIF GAUCHE (PUSSANCE)

ON/OFF: tourner la manopla en sens horaire pour allumer et en sens antihoraire pour éteindre.

Modification progressive de la luminosité: lorsque la lampe est allumée, tourner le bouton dans le sens des aiguilles d'une montre pour augmenter la luminosité ou dans le sens inverse des aiguilles d'une montre pour la diminuer.

INTER interrupteur ROTATIF DROIT (TEMPERATURE DE COULEUR)

Modifier la température de couleur: Lorsque la lampe est allumée, tournez le bouton dans le sens horaire pour augmenter la température de couleur et dans le sens antihoraire pour l'augmenter.

Remarque: la température de couleur varie de 2700K à 6000K sur 10 niveaux. Chaque position du bouton rotatif correspond à un niveau.

TELECOMMANDE

- Appuyez une fois pour allumer la lampe ou augmenter la luminosité d'un niveau (10 niveaux disponibles). Appuyez longuement pendant 0,5 seconde pour accéder directement au niveau le plus haut.
- Appuyez une fois pour éteindre la lampe ou diminuer la luminosité d'un niveau (10 niveaux disponibles). Appuyez longuement pendant 0,5 seconde pour l'éteindre directement.
- Lorsque la lampe est allumée, appuyez une fois pour augmenter la température de couleur d'un niveau (10 niveaux disponibles) jusqu'à ce que l'atmosphère 6000K. Appuyez longuement pendant 0,5 seconde pour atteindre directement 6000K.
- Lorsque la lampe est allumée, appuyez une fois pour diminuer la température de couleur d'un niveau (10 niveaux disponibles) jusqu'à ce que l'atmosphère 2700K. Appuyez longuement pendant 0,5 seconde pour atteindre directement 2700K.

Appariement de la télécommande:

Après avoir allumé la lampe, veuillez suivre les étapes suivantes dans les 10 secondes : tournez rapidement le bouton rotatif droit dans le sens des aiguilles d'une montre sur 3 positions, dans le sens inverse des aiguilles d'une montre sur 3 positions, puis à nouveau dans le sens des aiguilles d'une montre sur 3 positions. Si la lampe digitale ne répond pas pendant 10 secondes, elle est entrée en mode d'appariement. Pendant qu'il s'apparie, appuyez rapidement sur l'interrupteur quel bouton de la télécommande pour l'appairer. Si cela ne fonctionne pas, veuillez réessayer les étapes ci-dessus.

Débrancher de la télécommande:

Lors de la charge lorsque le produit est éteint, veuillez suivre les étapes suivantes en moins de 10 secondes : tournez rapidement le bouton rotatif droit dans le sens des aiguilles d'une montre sur 4 positions, dans le sens inverse des aiguilles d'une montre sur 4 positions, puis de nouveau dans le sens des aiguilles d'une montre sur 4 positions. La lampe numérique répondra pendant 10 secondes pour signaler que le débranchement est réussi.

(IT) Italia

MODALITÀ D'UTILIZZO

MANOPOLA ROTANTE DI SINISTRA (ACCENSIONE)

ON/OFF: ruotare la manopola in senso orario per accendere o in senso antiorario per spegnere.

Regolazione continua della luminosità: mentre la luce è accesa, ruotare la manopola in senso orario per aumentare la luminosità o in senso antiorario per diminuirla.

MANOPOLA ROTANTE DI DESTRA (TEMP. COLORE)

Cambiar la temperatura del colore: Mentre la luce è accesa, ruotare la manopola in senso orario per diminuire la temperatura del colore o in senso antiorario per aumentarla la temperatura del colore.

Note: la temperatura del colore varia da 2700 K a 6000 K in 10 livelli. Ciascuna posizione della manopola rotante corrisponde ad un livello.

TELECOMANDO REMOTO

- Premere una volta per accelerare la luce o aumentare la luminosità di un livello (10 livelli disponibili). Premere a lungo per 0,5 secondi per accedere direttamente all'impostazione più potente.
- Premere una volta per spegnere la luce o diminuire la luminosità di un livello (10 livelli disponibili). Premere a lungo per 0,5 secondi per spegnere direttamente.
- Mentre la luce è accesa, premere una volta per aumentare la temperatura del colore di un livello (10 livelli disponibili) fino a raggiungere 6000 K. Premere a lungo per 0,5 secondi per raggiungere direttamente 6000 K.
- Mentre la luce è accesa, premere una volta per diminuire la temperatura del colore di un livello (10 livelli disponibili) fino a raggiungere 2700 K. Premere a lungo per 0,5 secondi per raggiungere direttamente 2700 K.

Abbinamento del telecomando:

Dopo aver spento la luce, completare i seguenti passaggi entro 10 secondi: ruotare rapidamente la manopola destra in senso orario per 3 posizioni, in senso antiorario per 3 posizioni, quindi di nuovo in senso orario per 3 posizioni. Se la spia lampeggia lentamente per 10 secondi, è entrata nella modalità di associazione. Durante il pairing, premere rapidamente un pulsante qualsiasi sul telecomando per eseguire l'associazione. Se questa procedura non sarà andata a buon fine, prova nuovamente i passaggi precedenti.

Disassociazione del telecomando:

durante la ricarica quando il prodotto è spento, completare i seguenti passaggi entro 10 secondi: ruotare rapidamente la manopola destra in senso orario di 4 posizioni, in senso antiorario di 4 posizioni, quindi nuovamente in senso orario di 4 posizioni. La spia lampeggerà rapidamente per 10 secondi per segnalare che la procedura è andata a buon fine.

(PT) Portugues

MODALIDADE DE UTILIZAO

MANOPOLA ROTANTE DE SINISTRA (ACCENSÃO)

ON/OFF: rodar o botão no sentido horário para ligar ou no sentido anti-horário para desligar.

Ajuste contínuo do brilho: Enquanto a luz estiver acesa, gire o botão no sentido horário para aumentar o brilho ou no sentido anti-horário para diminuir o brilho.

(PT) Portugues

MODALIDADE DE UTILIZAO

MANOPOLA ROTANTE DE SINISTRA (ACCENSÃO)

ON/OFF: rodar o botão no sentido horário para ligar ou no sentido anti-horário para desligar.

Ajuste contínuo do brilho: Enquanto a luz estiver acesa, gire o botão no sentido horário para aumentar o brilho ou no sentido anti-horário para diminuir o brilho.

(PL) Polska

HOW TO OPERATE

LEFT ROTARY KNOB (POWER)

ON/OFF: Rotate the knob clockwise to turn on or counterclockwise to turn off.

Stepless Adjustment of Brightness: While the light is on, rotate the knob clockwise to increase brightness or counterclockwise to decrease brightness.

RIGHT ROTARY KNOB (COLOR TEMP)

Change Color Temperature: While the light is on, rotate the knob clockwise to change color temperature or counterclockwise to increase color temperature.

REMOTE CONTROL

- Single press to turn the light on or increase the brightness by one level (10 levels available).
- Long press for 0.5 seconds to access the brightest setting directly.
- Single press to turn the light off or decrease the brightness by one level (10 levels available).
- Long press for 0.5 seconds to turn it off directly.

REMOTE CONTROL PAIRING

After turning off the light, please complete the following steps within 10 seconds:

- Turn the light on and hold for 3 seconds.
- Press and hold the right rotary knob clockwise for 4 positions, then clockwise once again for 4 positions.
- Turn the light off for 10 seconds.

RECHARGE

Use a 30W or higher USB power source for the fastest charging possible. When charging with a USB power source that is less than 30W, charging times will be extended.

(DE) Deutsch

HOW TO OPERATE

LEFT ROTARY KNOB (POWER)

ON/OFF: Rotate the knob clockwise to turn on or counterclockwise to turn off.

Stepless Adjustment of Brightness: While the light is on, rotate the knob clockwise to increase brightness or counterclockwise to decrease brightness.

RIGHT ROTARY KNOB (COLOR TEMP)

Change Color Temperature: While the light is on, rotate the knob clockwise to change color temperature or counterclockwise to increase color temperature.

REMOTE CONTROL

- Single press to turn the light on or increase the brightness by one level (10 levels available).
- Long press for 0.5 seconds to access the brightest setting directly.
- Single press to turn the light off or decrease the brightness by one level (10 levels available).
- Long press for 0.5 seconds to turn it off directly.

REMOTE CONTROL PAIRING

After turning off the light, please complete the following steps within 10 seconds:

- Turn the light on and hold for 3 seconds.
- Press and hold the right rotary knob clockwise