




# Wreath Hanger

## Instructions and Usage Guide

CP1031

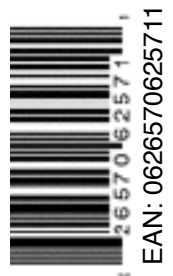

### Mounting Instructions

Clean the mounting surface. Good mounting surfaces include glass, metal, and fiberglass. Clean the sealing edge of the vacuum cup. Lightly moisten the mounting surface or sealing edge of the vacuum cup before attaching. Press the vacuum cup against the mounting surface, making sure the sealing edge is touching the mounting surface on all sides. Press the pump repeatedly until the pump no longer springs back out of the pump cylinder. The orange band should not be visible. Wrap the flexible wire around your wreath's frame to secure it.

### Check for the Orange Band During Use

SeaSucker vacuum mounts are not intended to be permanent fixtures. The Wreath Hanger may gradually lose vacuum over time, so you should occasionally check the to see if the orange vacuum-strength indicator band is visible. If you see the orange band, simply pump the SeaSucker as described above. If the orange band appears less than two hours after being pumped to full strength, cleaning, maintenance or repositioning may be required.

### Care and Maintenance

To get the most out of your SeaSucker Wreath Hanger, inspect it regularly and store it in the included carrying case. Check the vacuum cups for stiffness, cracks, cuts or roughness around the sealing edge. Make sure that the screws attaching the vacuum pads to the SeaSucker housing are tightened securely. Clean the vacuum cups before each use with a sponge or soft cloth, mild dish soap and water. Do not use harsh solvents or abrasive cleaning pads. The vacuum pump should be cleaned after taking down your wreath. To clean the pump, pull the plunger straight out of the pump cylinder. Clean the inside of the cylinder with dish soap and a soft cloth or paper towel. The plunger should be wiped clean and the black rubber gasket at the tip of the plunger should be re-lubed with a thin layer of silicone-based gel lubricant. After cleaning, push the plunger back into the cylinder and pump it several times to seat it properly and distribute the lubricant.

### Warranty

SeaSucker offers a 1-year, non-transferable warranty covering defects in materials and workmanship. Defective products can be returned within 1 year of the date of original purchase to SeaSucker for replacement or repair (at SeaSucker's option). Warranty claims must be accompanied by a sales receipt or other proof of purchase document. The cost of transportation to and from SeaSucker for the repair or replacement of any defective part or accessory is not covered by this warranty and is to be paid by the owner. This warranty does not apply to damage or failure resulting from normal use, routine wear and tear, lack of maintenance, user error, alteration of the product, accidents, abuse, or neglect. This warranty is given in lieu of all other written or oral warranties, express or implied, including without limitation implied warranties of merchantability and fitness for a particular purpose, and are limited to the duration and specifications of this warranty. SeaSucker's liability for any damages relating to any allegedly defective product, whether arising from the use or the inability to use the product and whether claimed under tort, contract or any other legal theory, shall be limited to the actual price paid for such product and shall in no event include loss of use, loss of time, incidental, consequential, special, or indirect damages of any kind, even if SeaSucker is aware of the possibility of such damages, to the full extent as such may be disclaimed by law.

Products returned to SeaSucker that are determined by SeaSucker (in our sole discretion) to be free of defects or that are no longer within the warranty period may still be repaired or replaced at your expense. Replacement parts, including vacuum pads, pumps, and hardware, can be found on-line in the Replacement Parts section at [www.SeaSucker.com](http://www.SeaSucker.com).





# Wreath Hanger Instructions and Usage Guide



**Mounting Instructions**  
Clean the mounting surface. Good mounting surfaces include glass, metal, and fiberglass. Clean the sealing edge of the vacuum cup. Lightly moisten the mounting surface or sealing edge of the vacuum cup before attaching. Press the vacuum cup against the mounting surface, making sure the sealing edge is touching the mounting surface on all sides. Press the pump repeatedly until the pump no longer springs back out of the pump cylinder. The orange band should not be visible. Wrap the flexible wire around your wreath's frame to secure it.

## Check for the Orange Band During Use

Seasucker vacuum mounts are not intended to be permanent fixtures. The Wreath Hanger may gradually lose vacuum over time, so you should occasionally check the to see if the orange vacuum-strength indicator band is visible. If you see the orange band, simply pump the Seasucker as described above. If the orange band appears less than two hours after being pumped to full strength, cleaning, maintenance or repositioning may be required.

## Care and Maintenance

To get the most out of your Seasucker Wreath Hanger, inspect it regularly and store it in the included carrying case. Check the vacuum cups for stiffness, cracks, cuts or roughness around the sealing edge. Make sure that the screws attaching the vacuum pads to the Seasucker housing are tightened securely. Clean the vacuum cups before each use with a sponge or soft cloth, mild dish soap and water. Do not use harsh solvents or abrasive cleaning pads. The vacuum pump should be cleaned after taking down your wreath. To clean the pump, pull the plunger straight out of the pump cylinder. Clean the inside of the cylinder with dish soap and a soft cloth or paper towel. The plunger should be wiped clean and the black rubber gasket at the tip of the plunger should be re-lubed with a thin layer of silicone-based gel lubricant. After cleaning, push the plunger back into the cylinder and pump it several times to seat it properly and distribute the lubricant.

## Warranty

Seasucker offers a 1-year, non-transferable warranty covering defects in materials and workmanship. Defective products can be returned within 1 year of the date of original purchase to Seasucker for replacement or repair (at Seasucker's option). Warranty claims must be accompanied by a sales receipt or other proof of purchase document. The cost of transportation to and from Seasucker for the repair or replacement of any defective part or accessory is not covered by this warranty and is to be paid by the owner. This warranty does not apply to damage or failure resulting from normal use, routine wear and tear, lack of maintenance, user error, alteration of the product, accidents, abuse, or neglect. This warranty is given in lieu of all other written or oral warranties, express or implied, including without limitation implied warranties of merchantability and fitness for a particular purpose, and are limited to the duration and specifications of this warranty. Seasucker's liability for any damages relating to any allegedly defective product, whether arising from the use or the inability to use the product and whether claimed under tort, contract or any other legal theory, shall be limited to the actual price paid for such product and shall in no event include loss of use, loss of time, incidental, consequential, special, or indirect damages of any kind, even if Seasucker is aware of the possibility of such damages, to the full extent as such may be disclaimed by law. Products returned to Seasucker that are determined by Seasucker (in our sole discretion) to be free of defects or that are no longer within the warranty period may still be repaired or replaced at your expense. Replacement parts, including vacuum pads, pumps, and hardware, can be found on-line in the Replacement Parts section at [www.Seasucker.com](http://www.Seasucker.com).

