

WARNINGS

- Check for the indicator band during use.
- Attach protective cover when not in use.
- Inspect screws regularly and retighten if necessary.
- Clean and lubricate your SeaSucker's pumps regularly.
- Clean the mounting surface and your SeaSucker before attaching.
- Avoid touching the release tabs while your SeaSucker is in use.
- Do not allow anything to interfere with the free movement of the plunger while in use.
- Avoid conditions that could cause your SeaSucker to slip or to disengage prematurely, such as contaminants, cuts or scratches in the mounting surface, or applying pressure against the cup edge.
- Do not use your SeaSucker when the indicator band is visible. If the indicator band appears too quickly after pumping, discontinue use and refer to the *Troubleshooting Guide* below.

Care and Maintenance: For best performance, inspect your SeaSucker regularly. Examine the pump for cracks or other damage. Examine the vacuum cup for cracks, cuts or roughness around the sealing edge. Check vacuum cup for stiffness, dryness or cracks. Ensure that the screws holding the pump housing to the vacuum cup are securely tightened. Periodically clean the face of the vacuum cup with a soft cloth, dish soap and water. Do not use solvents or abrasive cleaning pads. If the pump feels sluggish or obstructed, pull the plunger straight out of the pump and clean any dirt out of the inside of the pump. Clean the plunger's black rubber gasket and lubricate the gasket with silicone gel (our recommended lubricant, Lube Tube, is available on-line at www.seasucker.com). Do not use petroleum-based lubricants on the gasket. Insert plunger back into the pump cylinder and push in until seated normally.

Refurbishment: SeaSucker products that are out of warranty or suffer damage beyond the scope of the warranty can be refurbished. Damaged pumps or vacuum cups can be traded in for new pumps or vacuum cups at a substantial discount from their retail price. For more details, go to the Replacement Parts section of SeaSucker's on-line store at www.seasucker.com.

Warranty: SeaSucker, LLC offers a lifetime, non-transferable warranty covering defects in materials and workmanship. Defective products can be returned to SeaSucker for replacement or repair (at SeaSucker's option). Warranty claims must be accompanied by a sales receipt or other proof of purchase document. The cost of transportation to and from SeaSucker for the repair or replacement of any defective part or accessory is not covered by this warranty and is to be paid by the owner. This warranty does not apply to damage or failure resulting from normal use, routine wear and tear, lack of maintenance, user error, alteration of the product, accidents, abuse, or neglect. This warranty is given in lieu of all other written or oral warranties, express or implied, including without limitation implied warranties of merchantability and fitness for a particular purpose, and are limited to the duration and specifications of this warranty. SeaSucker's liability for any damages relating to any allegedly defective product, whether arising from the use or the inability to use the product and whether claimed under tort, contract or any other legal theory, shall be limited to the actual price paid for such product and shall in no event include loss of use, loss of time, incidental, consequential, special, or indirect damages of any kind, even if SeaSucker is aware of the possibility of such damages, to the full extent as such may be disclaimed by law. See www.seasucker.com for product return instructions and more information.


TROUBLESHOOTING GUIDE

Problem	What Might Be Wrong	How To Fix It
Slow Leakage	Dry mounting surface or vacuum pad	Moisten the mounting surface or the vacuum pad
	Nicks or cuts on vacuum pad	Replace the vacuum pad
	Dirt in pump	Clean and re-lube the plunger and pump cylinder
	Dry pump	Re-lube the plunger seal
	Dirt on vacuum pad	Clean the vacuum pad
	Dirty or uneven mounting surface	Clean the mounting surface or move to a new spot
Severe Leakage	Nicks or cuts on vacuum pad	Replace the vacuum pad
	Damaged pump	Replace the vacuum pump
	Dirty or uneven mounting surface	Clean the mounting surface or move to a new spot
Jammed or Sluggish Pump	Dry pump	Re-lube the plunger seal
	Obstructed valve stem	Remove the obstruction; clean and re-lube the pump
	Dirt in pump	Clean and re-lube the plunger and pump cylinder

Single Tank Strap



MD5531

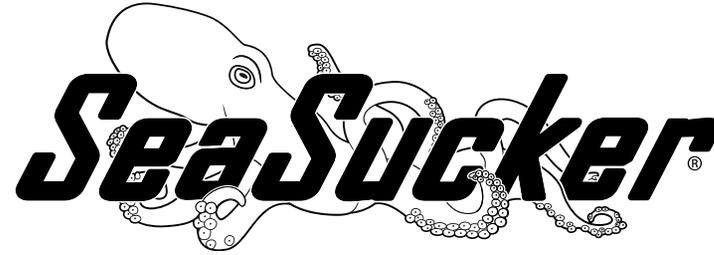

Designed and Manufactured by
SeaSucker, LLC ☆ Bradenton, Florida



See more great SeaSucker products on-line at: www.SeaSucker.com

To Attach Your Tank Strap: Make sure the mounting surface is clean and clear of any obstructions. The mounting surface should be non-porous; smoother and flatter is better. Press firmly against the tank holder so the vacuum pad is making a seal against the mounting surface. Pump the plunger until the orange indicator band is no longer visible.

To Adjust Your Tank Holder: The single tank strap has a diameter range of approximately 2" to 7.5". To attach your tank, position your tank in the bracket and pull the two ends of the strap around the tank. Push the notched strap through one of the slots on the other straps and connect the straps as tightly as possible.

To Remove Your Tank Strap: With your fingertip, use one of the tabs on top of the SeaSucker's vacuum pad to lift the edge of the cup and break the vacuum.

Check the Indicator Band During Use: Because your tank holder is not intended to be a permanent fixture, you should monitor it during use. If you see the orange band on the plunger, simply pump the SeaSucker as described above. If the orange band appears less than two hours after being pumped to full strength, maintenance may be required.

Problem	What Might Be Wrong	How To Fix It
Slow Leakage	Dry mounting surface or vacuum pad	Moisten the mounting surface or the vacuum pad
	Nicks or cuts on vacuum pad	Replace the vacuum pad
	Dirt in pump	Clean and re-lube the plunger and pump cylinder
	Dry pump	Re-lube the plunger seal
	Dirt on vacuum pad	Clean the vacuum pad
	Dirty or uneven mounting surface	Clean the mounting surface or move to a new spot
	Nicks or cuts on vacuum pad	Replace the vacuum pad
	Damaged pump	Replace the vacuum pump
Severe Leakage	Dirty or uneven mounting surface	Clean the mounting surface or move to a new spot
	Dirty pump	Re-lube the plunger seal
	Obstructed valve stem	Remove the obstruction, clean and re-lube the pump
Jammed or Sluggish Pump	Dry pump	Re-lube the plunger seal
	Dirty or uneven mounting surface	Clean the mounting surface or move to a new spot

Warranty: Seasucker, LLC offers a lifetime, non-transferable warranty covering defects in materials and workmanship. Defective products can be returned to Seasucker for replacement or repair (at Seasucker's option). Warranty claims must be accompanied by a sales receipt or other proof of purchase document. The cost of transportation to and from Seasucker for the repair or replacement of any defective part or accessory is not covered by this warranty and is to be paid by the owner. This warranty does not apply to damage or failure resulting from normal use, routine wear and tear, lack of maintenance, user error, alteration of the product, accidents, abuse, or neglect. This warranty is given in lieu of all other written or oral warranties, express or implied, including without limitation implied warranties of merchantability and fitness for a particular purpose, and are limited to the duration and specifications of this warranty. Seasucker's liability for any damages relating to any allegedly defective product, whether arising from the use or the inability to use the product and whether claimed under tort, contract or any other legal theory, shall be limited to the actual price paid for such product and shall in no event include loss of use, loss of time, incidental, consequential, special, or indirect damages of any kind, even if Seasucker is aware of the possibility of such damages, to the full extent as such may be disclaimed by law. See www.seasucker.com for product return instructions and more information.

Care and Maintenance: For best performance, inspect your Seasucker regularly. Examine the pump for cracks or other damage. Examine the vacuum cup for cracks, cuts or roughness around the sealing edge. Check vacuum cup for stiffness, dryness or cracks. Ensure that the screws holding the pump housing to the vacuum cup are securely tightened. Periodically clean the face of the vacuum cup with a soft cloth, dish soap and water. Do not use solvents or abrasive cleaning pads. If the pump feels sluggish or obstructed, pull the plunger straight out of the pump and clean any dirt out of the inside of the pump. Clean the plunger's black rubber gasket and lubricate the gasket with silicone gel (our recommended lubricant, Lube Tube, is available on-line at www.seasucker.com). Do not use petroleum-based lubricants on the gasket. Insert plunger back into the pump cylinder and push in until seated normally.

Refurbishment: Seasucker products that are out of warranty or suffer damage beyond the scope of the warranty can be refurbished. Damaged pumps or vacuum cups can be traded in for new pumps or vacuum cups at a substantial discount from their retail price. For more details, go to the Replacement Parts section of Seasucker's on-line store at www.seasucker.com.

Warranty: Seasucker, LLC offers a lifetime, non-transferable warranty covering defects in materials and workmanship. Defective products can be returned to Seasucker for replacement or repair (at Seasucker's option). Warranty claims must be accompanied by a sales receipt or other proof of purchase document. The cost of transportation to and from Seasucker for the repair or replacement of any defective part or accessory is not covered by this warranty and is to be paid by the owner. This warranty does not apply to damage or failure resulting from normal use, routine wear and tear, lack of maintenance, user error, alteration of the product, accidents, abuse, or neglect. This warranty is given in lieu of all other written or oral warranties, express or implied, including without limitation implied warranties of merchantability and fitness for a particular purpose, and are limited to the duration and specifications of this warranty. Seasucker's liability for any damages relating to any allegedly defective product, whether arising from the use or the inability to use the product and whether claimed under tort, contract or any other legal theory, shall be limited to the actual price paid for such product and shall in no event include loss of use, loss of time, incidental, consequential, special, or indirect damages of any kind, even if Seasucker is aware of the possibility of such damages, to the full extent as such may be disclaimed by law. See www.seasucker.com for product return instructions and more information.

- WARNINGS**
- Check for the indicator band during use.
 - Attach protective cover when not in use.
 - Inspect screws regularly and retighten if necessary.
 - Clean and lubricate your Seasucker's pumps regularly.
 - Clean the mounting surface and your Seasucker before attaching.
 - Avoid touching the release tabs while your Seasucker is in use.
 - Do not allow anything to interfere with the free movement of the plunger while in use.
 - Avoid conditions that could cause your Seasucker to slip or to disengage prematurely, such as contaminants, cuts or scratches in the mounting surface, or applying pressure against the cup edge.
 - Do not use your Seasucker when the indicator band is visible. If the indicator band appears too quickly after pumping, discontinue use and refer to the *Troubleshooting Guide* below.

Check the Indicator Band During Use: Because your tank holder is not intended to be a permanent fixture, you should monitor it during use. If you see the orange band on the plunger, simply pump the Seasucker as described above. If the orange band appears less than two hours after being pumped to full strength, maintenance may be required.

To Remove Your Tank Strap: With your fingertip, use one of the tabs on top of the Seasucker's vacuum pad to lift the edge of the cup and break the vacuum.


as possible.

To Adjust Your Tank Holder: The single tank strap has a diameter range of approximately 2" to 7.5". To attach your tank, position your tank in the bracket and pull the two ends of the strap around the tank. Push the notched strap through one of the slots on the other straps and connect the straps as tightly

To Attach Your Tank Strap: Make sure the mounting surface is clean and clear of any obstructions. The mounting surface should be non-porous, smoother and flatter is better. Press firmly against the tank holder so the vacuum pad is making a seal against the mounting surface. Pump the plunger until the orange indicator band is no longer visible.

See more great Seasucker products on-line at: www.seasucker.com

Designed and Manufactured by
Seasucker, LLC ☆ Bradenton, Florida

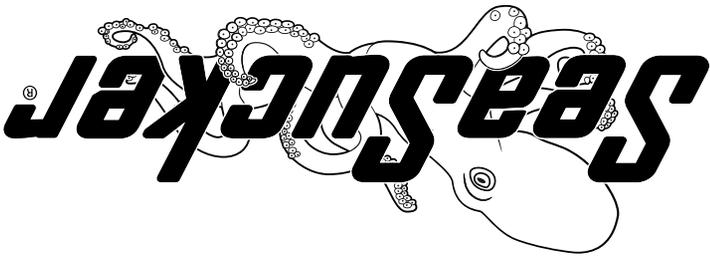

Single Tank Strap



MD5531