

POWER/MODE BUTTON

Press to turn ON

Press to change mode:

1. Flood Light (dimnable)
2. Red Flood Light (dimnable)
3. Flashing White Hazard Light
4. Flashing Red Hazard Light
5. Off

After 5 seconds of no mode change, next button press is OFF

CHANGE BRIGHTNESS

Press & HOLD to increase/decrease brightness. Main LED blinks to indicate minimum or maximum brightness level.

MODE RECALL

FLi OVERLANDER Adventure Light remembers the last used light mode. After 5 seconds of no mode change, the next Power Button press is OFF. When pressed again the light will recall last used light mode.

BATTERY LEVEL INDICATOR

There are 4 blue LEDs located by the main power button. These LEDs are the battery level gauge.

WAKE THE REMOTE FUNCTION:

If this is the first time the FLi OVER-LANDER has been turned on, or if has been off for 8 hrs or more, you must press the power button on the main body before the wireless remote will function. Doing this will "wake" the remote from sleep mode.

WIRELESS REMOTE

- Independently control light modes and brightness.
- Magnetically attaches to base of tripod for storage.
- Battery: CR2032 3V Lithium (non-rechargeable)

OPENING TRIPOD

1. Loosen the lock-ring on the main body of the tripod. Don't unscrew the locking ring completely, but make sure it has made at least two full rotations from "tight" to allow the tripod to unlock.

2. The rubber feet of the tripod legs nest to the main body holding the tripod legs closed. To open the tripod, pull the tripod legs away from the body.

3. Manipulate the legs into the open position. All three legs will move together and the lock-ring body will slide down the main body.

4. When the tripod legs are fully extended, tighten the lock-ring to hold the tripod in the open position.



CHARGING THE FLi OVER-LANDER

- Charge via USB-C port
- Charge Time: Approx 7 hours (0-100% with 3 Amp charger)
- Charger volts & amps: 5v 1A to 3A (3.6A maximum charging)

Charging Indication:

- Blue LEDs near main power button will blink while charging
- Blue LEDs near main power button will remain solid when fully charged.

***Please recharge a stored unit every four months to maintain optimum performance of the lithium-ion batteries and maximize charging levels. Battery excl. from warranty.*

CHARGING OTHER ITEMS FROM THE FLi OVERLANDER

Use the USB-A port to charge other devices, such as cell phones.

- Output Volts: 5V
- OutPut Amps: 2A



POWER BUTTON AND BATTERY LEVEL LEDS



USB-C & USB-A CHARGING PORTS



WIRELESS REMOTE AND MAGNETIC STORAGE

SPECIFICATIONS

Model # 14207

LIGHT

HIGH: 2600 Total Max True-Lumens

LOW: 150 TruE-Lumens

Red Light: 20 True-Lumens

RUNTIME

High: Approx 6 hours

Low: Approx 30 hours

BATTERY

Type:18650 (each cell = 3.7V 2000mAh) 7 cells Total

Total mAh: 14,000mAh

Voltage: 3.7V

OTHER

IPX4 Weatherproof rating

PACKAGE CONTENTS

- [1] FLi OVER-LANDER
- [1] Telescoping rods
- [1] Tripod
- [1] Wireless remote
- [1] USB charging block
- [1] USB-A to USB-C charging cable

1 Year warranty covering manufacturing defects

⚠️ LED SAFETY WARNING

This product contains high intensity LED devices. To prevent permanent eye damage, do not stare into the light beam at close range.

⚡⚠️ LIGHTNING STRIKE HAZARD WARNING

DO NOT USE during a thunderstorm. Before a thunderstorm approaches ensure the FLi OVER-LANDER Light is stored safely. If you are caught outside during a thunderstorm DO NOT STAND NEAR the FLi OVER_LANDER Light. STAY A SAFE DISTANCE AWAY from the FLi OVERLANDER Light as it can act as a lightning rod. Use all lightning safety measures. Not following thunderstorm/lightning precautions can result in serious injury or death.

FLi
OVER-LANDER
TELESCOPING ADVENTURE LIGHT

