

REMOTE TAPE SWITCHES

BATTERY INFORMATION & WARNING

Before replacing batteries, read the enclosed BATTERY INFORMATION/WARNING insert in your original packaging. For additional battery safety, handling, and product information, visit www.surefire.com/batteries.

MAINTENANCE

Use a clean, dry cloth to wipe off body and window. Periodically clean and lubricate threads. Apply a thin coat of non-migrating, silicon-based lubricant to O-rings (do not use petroleum-based lubricants which can harm O-rings). For additional tips on maintaining your SureFire illumination tool, visit www.surefire.com/faqs-maintenance.

ACCESSORIES

SureFire makes a full line of accessories for most of its illumination tools. For a complete listing, visit www.surefire.com/partsaccessories.

THE SUREFIRE NO-HASSLE GUARANTEE

We'll do what it takes to keep your SureFire gear running smoothly. SureFire warrants that if you — our customer — purchase one of our products, and we determine that it is defective in material and/or workmanship during your lifetime, we will repair or replace it — no hassle!

Our warranty does not cover consumables or normal wear-and-tear — things like batteries draining, headbands and headpads wearing out, ink cartridges running out, and switches wearing out — or damage resulting from abuse, alterations, unauthorized repairs, or use contrary to SureFire's user manuals.

Should you need a replacement product, SureFire reserves the right to replace an obsolete product with a current production, like model. In the event that any issue with a SureFire product is not covered under this warranty SureFire can arrange to have the product repaired for a reasonable fee.

STANDARD DISCLAIMER

Except as specified above or prohibited by applicable law: all express or implied conditions and warranties, including, without limitation, any implied warranty or condition of merchantability or fitness for a particular purpose, or accuracy of any informational content, are hereby excluded and disclaimed by SureFire; and in no event will SureFire be liable for any special, direct, indirect, consequential, incidental or punitive damages howsoever arising and regardless of the theory of liability, even if advised of the possibility of such damages. Products, prices, availability, specifications, and offers are subject to change or cancellation at any time without notice.

WARRANTY CLAIMS



For claims, contact Customer Service at 714-545-9444 to obtain a Return Merchandise Authorization number (RMA#). Then package the unit carefully and send to (no CODs):

SureFire, LLC.
Repairs Department, RMA# _____
17680 Newhope Street, Suite B
Fountain Valley, CA 92708

SureFire will pay any reasonable shipping costs to return the unit to you.

SUREFIRE

REMOTE TAPE SWITCHES

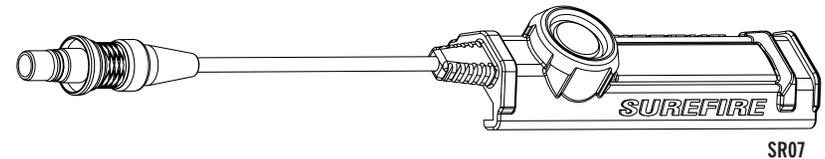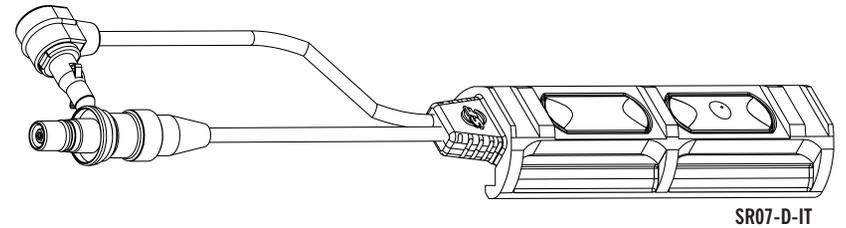

SUREFIRE

18300 MT. BALDY CIRCLE,
FOUNTAIN VALLEY, CA 92708-6122
SUREFIRE.COM

Revision A 3-2020
71-01-1108



USER MANUAL

REMOTE TAPE SWITCHES

⚠ WARNING

ALWAYS confirm weapon is unloaded and on SAFE before attempting installation.

⚠ WARNING

Use of substandard batteries can cause injury or property damage. Visit www.surefire.com/batterysafety.

INTERFACING TAILCAPS & REMOTE TAPE SWITCHES

CONNECT

To connect a tailcap and a remote tape switch, unplug the tailcap connector cover and insert remote tape switch connector until it clicks into place.

DISCONNECT

To disconnect remote tape switch connector from tailcap, grasp the remote tape switch connector firmly then twist and pull.

SWITCH OPERATION

SR07

Press pressure pad for momentary activation; click pushbutton for constant-on

SR07-D-IT

Press pressure pad with bump to activate Weapon Light
Press pressure pad w/o bump to activate auxiliary device

ST07

Press pressure pad for momentary activation

TAILCAP OPERATION

DS

Partially press for momentary activation; click for constant-on. If a pressure pad is installed, see applicable instructions below

UE

Requires remote tape switch

XI

Push toggle switch left to enable system; Push toggle switch right to disable (Fig 1). For momentary-on, press tailcap switch forward. For constant-on, rotate tailcap toggle switches up or down; rotate in opposite direction to turn light off (Fig 2).

SWITCH MOUNTING

SR07 / SR07-D-IT

Attach hook ends of remote tape switch to picatinny rail edges. Both remote tape switches provide two areas for optional use of tie wraps (not included) for added mounting security (Fig 3).

ST07

Use included alcohol wipe to clean the remote tape switch and installation site of the firearm. Remove both strips of Velcro® (included) adhesive backing and apply to the desired mounting area of the firearm, then adhere switch to the Velcro®.

XI

Install tail cap by hooking hinges to the WeaponLight hinge pin (Fig 4).

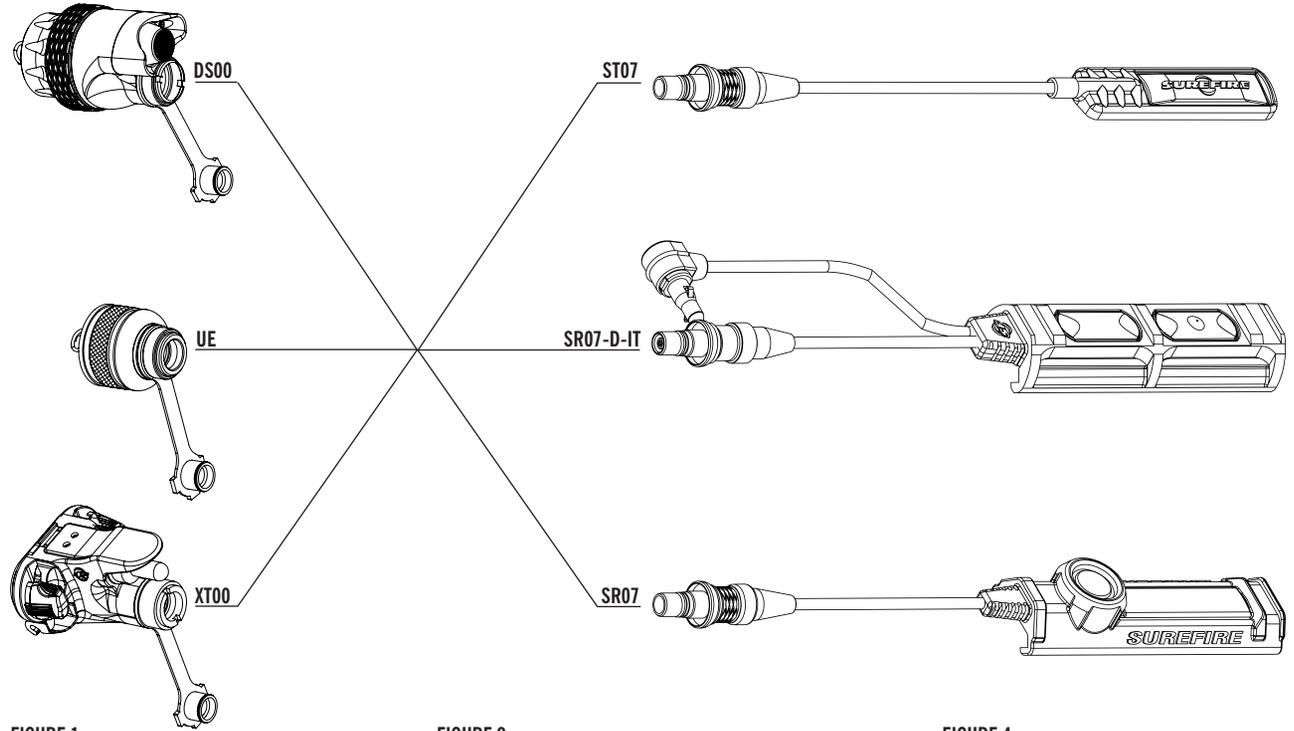


FIGURE 1

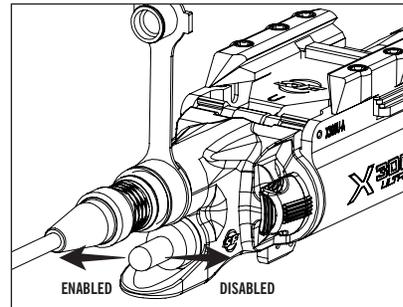


FIGURE 2

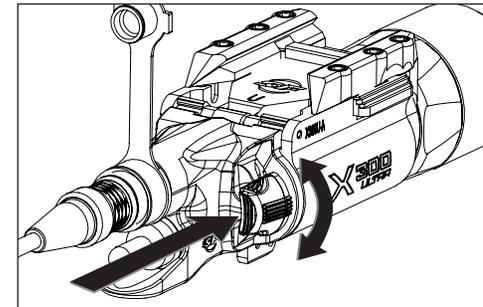


FIGURE 4

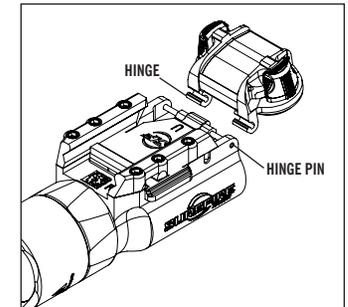


FIGURE 3

