

MULTIFUNCTIONAL HAND CRANK EMERGENCY RADIO

USER GUIDE

GET TO KNOW YOUR UNIT



- | | | | |
|-------------------------|------------------------------|-----------------------|----------------------|
| 1. Light/SOS button | 2. LED flash light | 3. Floodlight lock | 4. LED floodlight |
| 5. Radio frequency | 6. Radio signal indicator | 7. Speaker | 8. Radio tuning dial |
| 9. AM / FM / WB switch | 10. Speaker volume control | 11. Hand crank handle | 12. Solar panel |
| 13. Radio antenna | 14. Battery status indicator | 15. Charging port | 16. USB output port |
| 17. AAA battery chamber | | | |

USE THE RADIO

- Extend the antenna by pulling it out from its stored position.
- Choose your listening frequency by turning the AM / FM / WB Switch.
- Turn on the speaker by turning the speaker volume control dial clockwise. Spin the radio tuning dial to find your station. The radio's signal indicator will light up when the signal is strong enough.
- After listening, turn off the speaker by turning the speaker volume control counter clockwise then put the antenna back to its stored position.

USE THE LIGHT

- Quickly press the Light/SOS button to activate the LED flash light in the following sequence: weak light -> strong light -> SOS light -> off.
- To use the LED floodlight, press the floodlight lock (located at the bottom of the unit) to swing up the LED floodlight module.
- Press the light button to turn on the LED floodlight.

USE AS A POWER BANK

- Take off the cover piece to reveal the USB A and USB C ports. Note: Both ports can be used to draw power from the radio.
- Connect your device to with a compatible USB cable. We strongly recommend using your device's original cable, or a third-party certified cable (such as MFI).
- When done charging your device, unplug the cable and cover up the USB port.

RECHARGE WITH USB

- Take off the cover piece to reveal the USB C charging port.
- Connect your radio to a USB power source using the included USB C to USB A cable that comes with the unit.
- The battery status indicator will light up to indicate the radio is charging, all 4 sections will light up to indicate the radio is fully charged.
- After fully recharging the radio, unplug the cable and cover up the USB charging port.

OTHER WAYS TO RECHARGE

- **Hand Cranking:** swing out the hand crank handle, continuously crank it clockwise or counterclockwise. An average cranking speed of 120-180 rotations per minute, for one hour, can generate 18% of the battery power in the built-in battery.
- **Back-up AAA batteries:** insert 3x AAA batteries into the battery chamber, make sure the + and - polarities are inserted correctly according to the signs in the chamber. The radio will use the AAA batteries to recharge its internal li-ion battery. Note: the power bank feature cannot be used until the internal li-ion has enough power to charge. If you want to use the AAA back-up batteries (when the internal battery is completely drained) to activate the power bank feature, please insert a fresh set of AAA batteries and give the radio time to recharge the internal battery first. The AAA may take approximately one hour to recharge the internal battery before it can be used as a power bank. Cranking the hand crank at the same time will speed up the charging process.

[Caution] Do not insert the AAA batteries into the battery chamber while not in use and kept in storage, keep the AAA in a hard case to preserve them as emergency power. Remove the AAA batteries from the compartment after using the radio, leaving the AAA batteries in the battery chamber for too long may over drain the AAA battery and possibly cause leakage.

- **Solar Power:** position the solar panel (located on top the radio) towards the sun, solar power can slowly charge the radio. This charging method will take days to complete.

USE THE SOS SIREN

- Press and hold the Light/SOS button to activate a loud prolonged alarm sound with SOS light pattern at the same time.
- Quickly press the Light/SOS button again to turn off the SOS siren.

CHECK BATTERY STATUS

- Test the battery power by turning on the LED light to check the battery level.

NOTE: For maximum battery power, always fully-charge the radio before storing it away in a dry and cool place. Frequently check battery level and recharge it every 3-6 months.

PRODUCT SPECIFICATIONS

Radio	AM: 522-1710 KHz	LED Flashlight	120LM
	FM: 87 - 108 MHz	LED Floodlight	100LM
	Weather Bands: 162.400 - 162.550 MHz	SOS light	Yes
Built-in Battery Runtime	Radio: 14 hours	SOS siren	85DB
	LED light: 7-10 hours	USB output:	5V 1A
Built-in Battery	3.7V 2000mAh li-ion rechargeable battery	USB input:	5V 1.2A
Back-up battery	AAA batteries (included)	Hand crank:	Yes
		Solar Panel:	Yes

CONTACT US



510-979-9969

Mon-Fri 9am-5pm PST (US)



service@tenergy.com



power.Tenergy.com

LIVE CHAT

THANK YOU!