



Ultimate Survival Technologies
UST Brands
7720 Philips Hwy, Jacksonville, FL 32256
(904) 786-0033
www.ultimatesurvival.com

HERITAGE HAND WARMER

Read this complete instruction sheet and precautions prior to use.

HAND WARMER MUST BE FILLED WITH LIGHTER FUEL TO USE.

This item is shipped empty and does not contain lighter fuel. Lighter fuel sold separately. Use liquid cigarette lighter fuels only such as Ronsonol® Lighter Fuel or Zippo® Premium Lighter Fluid. Do not use butane gas fuels. Do not use gasoline, alcohol, or kerosene. Do not use charcoal BBQ lighter fluids. This is a refillable device. It is intended for multiple uses and instructions must be carefully followed to ensure safe use.

⚠ WARNING – BURN HAZARD.

NOT FOR USE BY CHILDREN, THE ELDERLY, THE HANDICAPPED, AND THOSE UNABLE TO REMOVE THE HAND WARMER BY THEMSELVES.

Hand Warmer's metal case gets very hot during use. It will remain hot until all fuel is consumed.

TO AVOID SKIN BURNS: Keep Hand Warmer in the protective fabric bag. Wrap it in an additional piece of cloth if still too hot. Do not remove Hand Warmer from protective fabric bag while still hot. Wait until all fuel is consumed and Hand Warmer has cooled down.

Remove Hand Warmer immediately from the skin if it becomes uncomfortably hot. If used incorrectly or used outside the protective fabric bag, higher temperatures will occur, which can cause burns and permanent scarring.

Do not keep the Hand Warmer on one area of your body for too long. Change Hand Warmer's position frequently. Do not use while sleeping.

FOR EXTERNAL USE ONLY.

Follow fuel filling instructions carefully. Do not put lighter fuel directly on burner to ignite. Do not overfill. Do not refill while still hot. Allow to cool down fully before refilling.

Do not use if flame is visible after ignition. This indicates overfilling. Put flame out and allow excess fuel to evaporate before re-igniting.

Lighter fuel is **FLAMMABLE**. Keep away from heat or flames while filling. Wipe up any spills immediately.

Do not allow fluid of Hand Warmer to contact eyes or mouth. Lighter fuel contains petroleum distillates. Call physician immediately if fuel is ingested or swallowed. Do not induce vomiting.




USE ONLY AS DIRECTED.

KEEP OUT OF REACH OF CHILDREN.

Read precautions on other side of this sheet prior to use.

The slim and lightweight Heritage Hand Warmer provides soothing warmth for hours. Use it for outdoor activities such as camping, hiking, skiing and so much more.

General Operating Instructions

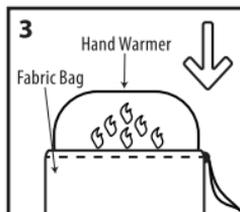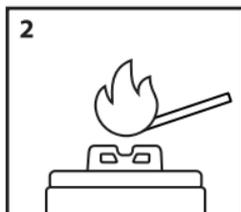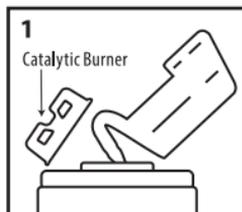

1. Filling: Remove Hand Warmer lid, then remove the catalytic burner unit from base. Pour lighter fuel into plastic filling cup, filling to upper line on cup. Do not spill and do not fill beyond upper line (overfilling will cause malfunction, risk of injury and fire). Then pour contents of filling cup into catalytic burner opening. Carefully wipe off any excess lighter fluid from the Hand Warmer surface and allow excess fuel to evaporate before igniting. Carefully replace catalytic burner unit.

2. Igniting: With the lid off the Hand Warmer, hold base unit with one hand and apply flame (from lighter or match) to the catalytic burner for approximately 10 seconds using other hand. When first using after initial filling, ignition could take longer and require applying flame more than one time. Keep hands and clothing away from any flame.

3. Warming bag: After ignition is confirmed, replace Hand Warmer lid, then place Hand Warmer into the warming bag. Hand Warmer should always be placed in the warming bag to prevent over-heating. After ignition, heat is provided by a catalytic process. There will be no flame present after ignition. Catalytic burner is expendable and should be replaced periodically. Once ignited there is no safe way to stop the heating action. If necessary, place the Hand Warmer in warming bag and place on a fireproof surface until all fuel is consumed and the Hand Warmer is cool to the touch.

2-YEAR LIMITED
WARRANTY
See website for details