OLIGHT

USER MANUAL

Arkfelo

Thank you for purchasing this Olight Product. Please read this manual carefully before use and keep it for future reference!

IN THE BOX

Arkfelo

USB Magnetic Charging Cable

SPECIFICATIONS

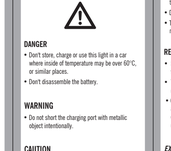

* All specifications are test results based on ANSI/NEMA FL1-2009 Standard. The tests are performed using the battery included in the flashlight with full battery. Note: The maximum output brightness will decrease as the battery voltage is consumed.

LASER

Max Output: ≤0.28mW@510nm ~ 530nm Wavelength

USB MAGNETIC CHARGING CABLE

Parameter	Specification
Charging cable	USB magnetic charging cable, length: 0.5m
Input	USB A - type DC 5V 1A
Charging pattern	CC&CV
Maximum charging current	1A
Voltage of fully charged battery	4.2V± 0.05V
Time to fully charge	2 hours (For reference only. Charging time is affected if the charging current is insufficient to provide 5V 1A power, causing the charging time will be longer)
Charging indicator	Red: charging Green: Full battery (≥ 95%) or disconnected with flashlight

PRODUCT OVERVIEW

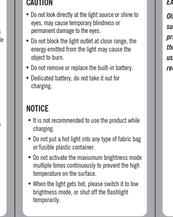

BEFORE FIRST USE

The Arkfelo ships in lockout mode. Before first use, Press and hold the center button (about 1 second) until the flashlight turns on with the moonlight or laser, and the flashlight will be unlocked.

CHARGING

GREEN – Charging Completed

RED – Charging

* Before first use please fully charge the product.

BATTERY LEVEL INDICATORS

Four green indicators (>75%)

Three green indicators (50%-75%)

Two green indicators (25%-50%)

One green indicator (10%-25%)

* One red indicator (<10%)

ICON | LIGHT SETTING

WHITE LIGHT

GREEN LASER

DANGER

- Don't store, charge or use this light in a car where inside of temperature may be over 60°C, or similar extreme heat.
- Don't disassemble the battery.

WARNING

- Do not start the charging port with metallic object intentionally.

CAUTION

- Do not look directly at the light source or shine it at others, may cause temporary blindness or permanent damage to the eyes.
- Do not block the light output of laser and cage, the energy emitted from the light may cause the object to burn.
- Do not remove or replace the built-in battery.
- Dedicated battery, do not take it out for charging.

NOTICE

- It is not recommended to use the product while charging.
- Do not put a hot light into any type of fabric bag or flexible plastic container.
- Do not activate the maximum brightness mode multiple times continuously, otherwise the high temperature can and will burn the battery.
- When the light gets hot, please switch it to low brightness mode, or shut off the flashlight temporarily.
- Active thermal management: The built-in thermistor monitors the temperature of the light in real time and suppresses overheating by reducing the output.
- Keep the charging port clean and dry.
- Do not put it in the mouth or lick it, leakage of the charging port can cause discomfort.
- Do not disassemble the product.
- The switch is magnetically sensitive. Its function may be affected nearby the strong magnets.

REMARK

- Fully charge the battery before using the flashlight for the first time.
- The maximum brightness level can only be reached when the battery level is>75%.
- Operating time in Turbo or high mode varies with ambient temperature and heat dissipation conditions, better heat dissipation longer runtime.

EXCLUSION CLAUSE

Olight is not liable for damages or injuries sustained resulting from the usage of the product inconsistent with the warnings in the manual, including but not limited to using the product inconsistent with the recommended lockout mode.

CONTENTS

HOW TO OPERATE
1. CENTER BUTTON
WHITE LIGHT MODE
ON/OFF: Press the center button to turn the light on/off. When the light is turned on again, it will return to the previously selected brightness level (when the light is turned off on the Turbo mode, the moonlight mode will be high mode) 1 minute after it is turned off. After that time, it will then revert to medium mode. Strobe mode cannot be memorized.
BRIGHTNESS ADJUSTMENT: When the flashlight is on, press and hold the center button to automatically cycle through moonlight, low, medium, high modes. The mode is selected when the center button is released.
MOONLIGHT MODE: When the flashlight is off, press and hold the center button for over one second, to access the moonlight mode. When the flashlight is turned on again, it returns to the moonlight mode due to its memory function.
DIRECT ACCESS TO TURBO MODE: Quickly double click the center button to activate Turbo mode. Double click quickly again to return to the previous mode. When the light is turned off for no turbo mode, it will revert back to low or to 1 minute and revert to medium after that time.
STROBE: In the unlock state, triple click (or more times) the center button to access the strobe mode. To quit this mode, single click or press and hold the center button.
TIMER: The Arkfelo has a timer (9 minutes and short 3 minutes) timer when the light needs to be automatically turned off. When the flashlight is on, double click and hold the center button under the current brightness level to access the timer settings. A single blink accesses the short timer while two blinks accesses the long timer. The flashlight will automatically turn off when the timer is up. After the timer is set, double click and hold the side switch to shift the timer settings. After the first timer run is up, you can enter the timer setting again, the last setting will be used.
LASER MODE

01

HELLEKSTEEGUT: Kuin haluat käyttää laserpistettä, pidä keskipainiketta painettuna sekunnin ajan, valaisin kirkastuu kesken valkoisen ollessa päällä. Nyt voit ohjata laserpistettä pitämällä keskipainiketta painettuna ja pitämällä keskipainiketta painettuna sekunnin ajan, valaisin kirkastuu seuraavalla kerralla Medium-kirkkaustilassa. Jos valaisin on ollut kirkkaimpi, Low-tai Moonlight-tilassa, laite käynnistyy myöhäisimpään tilaan mukaan.
STROBO: Kun valaisin ei ole lukitustilassa. Paina keskipainiketta nopeasti kolme kertaa tai enemmän käynnistääksesi Strobo-toiminnon. Sammuttaaksesi Strobo-toiminnon paina tai pidä keskipainiketta painettuna.
AJASTIN: Arkfelo sisältää pitkän (9 minuutin) ja lyhyen (3 minuutin) ajastimen, joka kytkee valon automaattisesti pois päältä. Kun taskulampu on päällä, käynnistämisen jo pidä keskipainiketta painettuna sen helkeistä kelkaisesta pitäätäkseen ajastinasetuksia. Nisu valonsäätöpiirin mukaan lyhyttä ajastinta, kun taas kaksi valkiilnyttä kyltkee pitäät pitkän ajastimen. Taskulampu sammuu automaattisesti, kun ajastin on loppunut. Kun ajastin on asetettu, tapiskiksua ja pidä pohjoista kaksikylmistä kelkaisesta ajastimen asetuksien vaihtia. Kun aiempi ajastin on päättynyt ja sinun ajastuksen valitimen uudestaan, valaisin käyttää edellisiä valitsia automaattisesti uudelleen.

SVENSKA

ON/OFF: Tryck på centrumknappen för att slå på/av. Om ljuset slås av medan det befinner sig i det tidigare valda ljusstyrkenivån (moonlight, low, middle) op tap mode lagras när den slås av, när ljuset är på Turbo-läge, lagras det som hög mode) kan i 1 minut efter att det er slått av, og går tilbake til medium mode. Strobe mode kan ikke lagres.
BRIGHTNESS ADJUSTMENT: Om ljuset är tänt, tryck och hållet ned mittknappen för att aktivera ljusbyte. Det finns fyra ljusstyrkor: Low, Medium, High och Moonlight. Det ljus som du vill ha det i det ljuset du vill ha det i det ljuset du vill ha det i det ljuset