





Battery installation

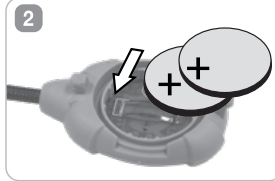




1. ARC Rail Installation

Slide ARC Rail Adapter into ARC rail to desired position and secure in place with center anti-slip lock screw. **DO NOT OVERTIGHTEN** this screw.

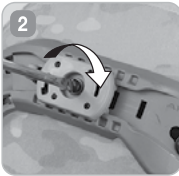



2. MOLLE Mount

Slide clip inside any strap position, pinch MOLLE strap to hook the lower end of the metal clip onto the strap.

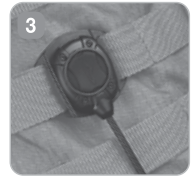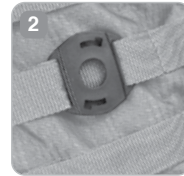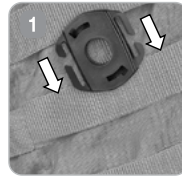

3. MICH Mount Installation

Back the screw out so the end of screw is flush with metal U-clip. Slide the exposed U-clip over the bottom edge of your helmet with the metal clip on the inside and the plastic base exposed on the outside of your Helmet. Holding Mount firmly upward, tighten center slotted screw until it stops.

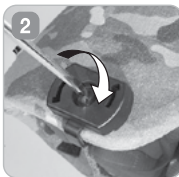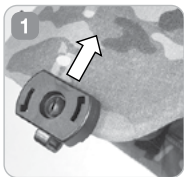

4. Picatinny Rail Mount


Remove the center through screw from the side of the Picatinny base mount. Slide Picatinny to desired position and insert side locking screw aligning with any slot in Picatinny rail and tighten to clamp in place. **DO NOT OVERTIGHTEN** this screw.



5. (ABR) Above Rail Mount

A. If using MPLS ABR on a ballistic helmet, skip to step two. For use with nonballistic helmets, begin by snapping off unneeded portion of ABR mount by hand or with a pair of pliers, and discarding the smaller 'hook' portion

Loosen or remove front rail screw, and slide ABR into desired position beneath rail. Retighten front rail screw.

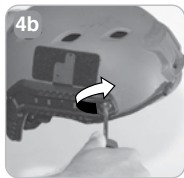

Select Charge MPLS mount and secure with included machine screws, gently tightening with a Phillips screwdriver. Install Switch/Point onto mount.



English

Battery Installation

See *Battery Installation Diagram*

- (2) CR2016 Coin Cells - 6V

Princeton Tec cares about the environment and recommends recycling batteries. For more information about battery recycling, please go to: batteryrecycling.com To install the batteries, rotate light unit out of base. Lift tab of battery door on the underside of light unit to expose coin cell(s)

Install coin cell(s) batteries with the (+) positive side facing up. Improper installation of the batteries will damage the light and void the warranty.

Replace the battery door with the lift tab properly aligned with lift tab slot of the housing. Press door firmly in place making sure it is all the way seated in place.

WARNING

Never mix fresh and used batteries. Never mix different battery brands or chemistry types.

Always remove drained batteries immediately.

Remove batteries during long periods of storage.

Switch Operation

- Check the batteries for proper installation.
- Replace batteries if proper installation is confirmed.
- This light has been designed to be water resistant. Check the light for water contamination on the circuit board. The light will resume normal operation once any water is shaken or blown out and the light is left open until completely dry. If the light has been contaminated with salt water, flush the unit with fresh water and dry as described above.

There are five different base mounts your MPLS light will attach to: ARC Rail, MOLLE, MICH Helmet, Pica-tinny Rail and (ABR) Above Rail.

Troubleshooting

If the MPLS fails to light:

- Check the batteries for proper installation.
- Replace batteries if proper installation is confirmed.
- This light has been designed to be waterresistant. Check the light for water contamination on the circuit board. The light will resume normal operation once any water is shaken or blown out and the light is left open until completely dry. If the light has been contaminated with salt water, flush the unit with fresh water and dry as described above.

USA– International 3-Year Warranty

WARRANTY – Princeton Tec warrants this product to be free from defects in workmanship and materials under normal use for three years. This warranty covers all of the component parts of the product except batteries. This warranty does not cover deterioration due to normal wear or damage due to misuse, alteration, negligence, accidents, or unauthorized repair. Princeton Tec will repair or replace parts which are defective in workmanship or materials.

Your authorized Princeton Tec Dealer and Princeton Tec are the only facilities authorized to repair the product. After (3) unsuccessful attempts (within the warranty period) to repair the product, you have the right to elect replacement of the product or a refund of the purchase price less allowance for use of the product. NO INCIDENTAL OR CONSEQUENTIAL DAMAGES ARE INCLUDED IN THIS WARRANTY. (Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Princeton Tec reserves the right to change product specifications without notice.

FOR CALIFORNIA RESIDENTS

WARNING: This product contains Bisphenol A (BpA) a chemical known to the State of California to cause birth defects or other reproductive harm.

Return Policy

If your light fails to operate, follow these simple steps:

1. Check batteries. Replace if necessary.
2. To send your light in for repair or replacement, first contact Princeton Tec customer service on **1-800-257-9080** to request an RMA number. Please have your light model, date of purchase and a brief description of the fault you are experiencing. No warranty repairs will be accepted without an RMA number.
3. Return the light to: **Princeton Tec, PO Box 8057 Trenton NJ 08650**. Postage due and freight collect items will not be accepted.
4. Upon receipt your light will be processed in about two weeks. Please allow additional time for return transportation from NJ.

Princeton Tec
PO Box 8057, Trenton, NJ 08650
Phone: 609-298-9331
Fax: 609-298-9601
www.princetonotec.com
© 2020 Princeton Tec

